



AUTOMATIC - MECHANICAL MOVEMENT MANUAL-WINDING & FULL SKELTON MOVEMENT

A) DISPLAYS AND BUTTONS

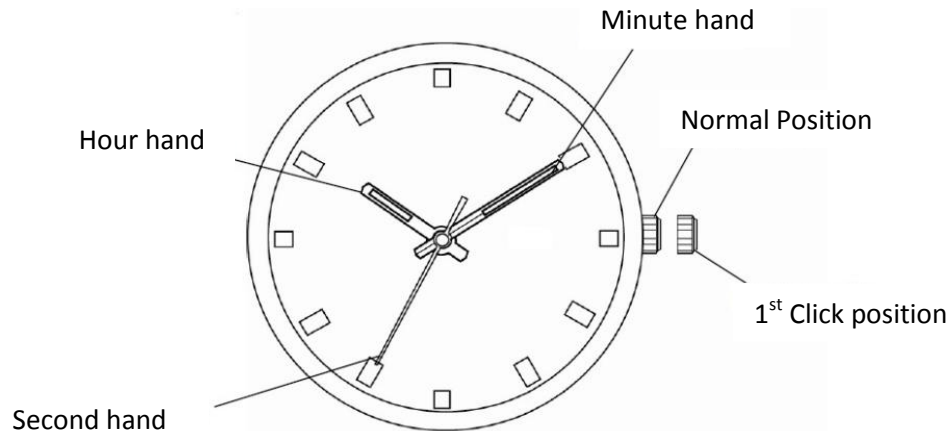

Automatic winding structure

Winding direction: Counter-clockwise (seeing from case back side)

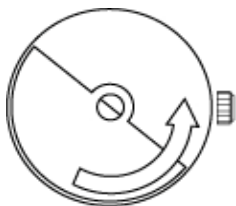

Operating method

Winding the mainspring, adjusting the hand, day/date is done by the below procedure.

(A) Winding the mainspring

Automatic winding watch can also be hand wound by turning the crown in "A" position. Wind 15 ~ 20 times clockwise until second hand starts to move naturally.

(B) Setting the Date and Day

Setting the Date

1. Pull the crown to "B" position.
2. Turn the crown counter-clockwise to set the date.
3. After the date has been set, push the crown back to the normal position.

Setting the Day

1. Pull the crown to "B" position.
2. Turn the crown clockwise to set the day.
3. After the date has been set, push the crown back to the normal position.

(C) Setting the Time

1. Pull the crown to "C" position.
2. Turn the crown to set the hour and minute hands.